




# BASE CABINET ASSEMBLY INSTRUCTION

L 3DB(12-36)  
VDB(12-21)-3

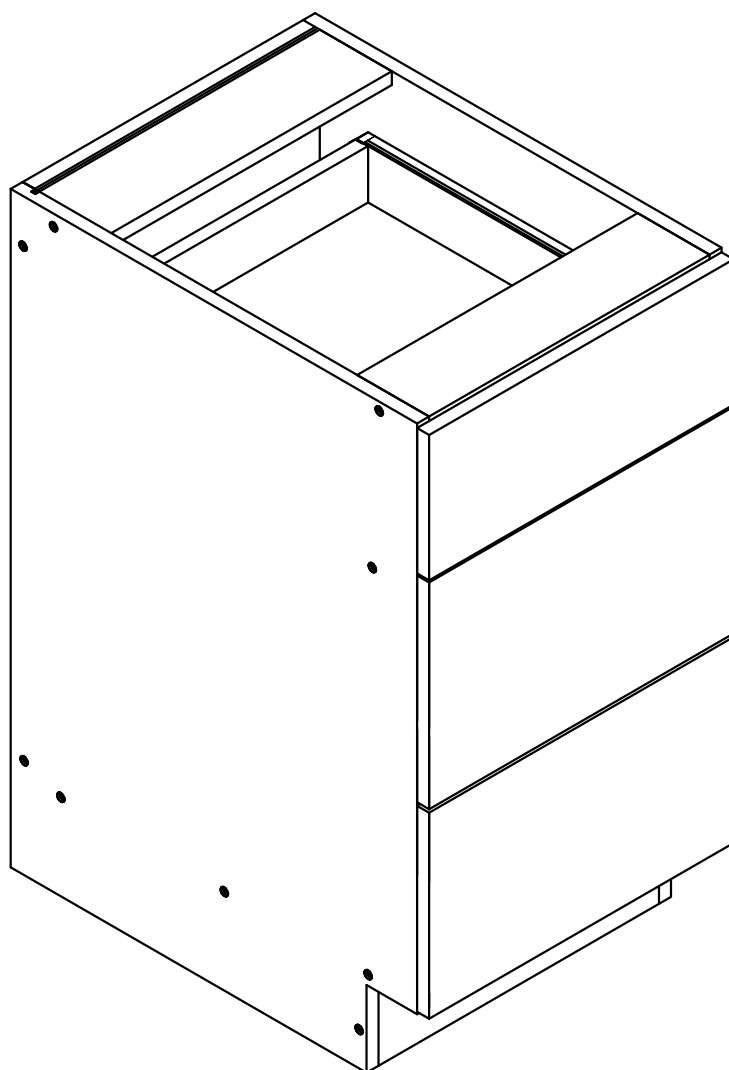


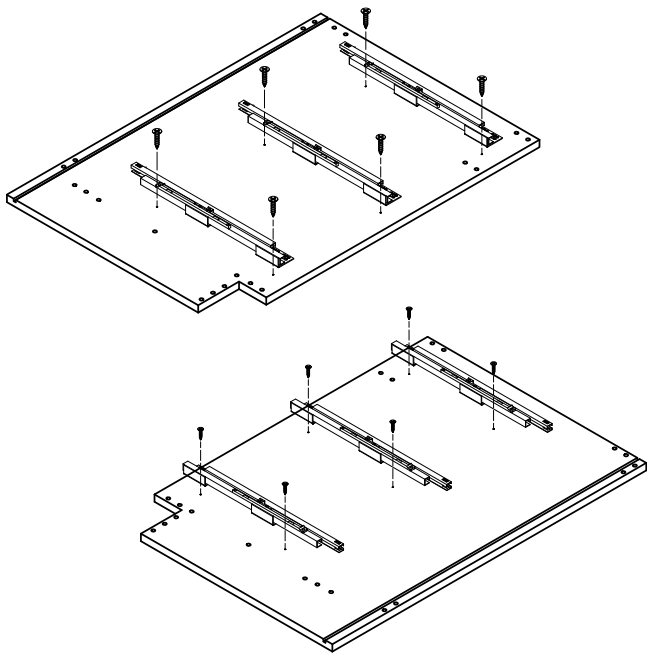

Step-1

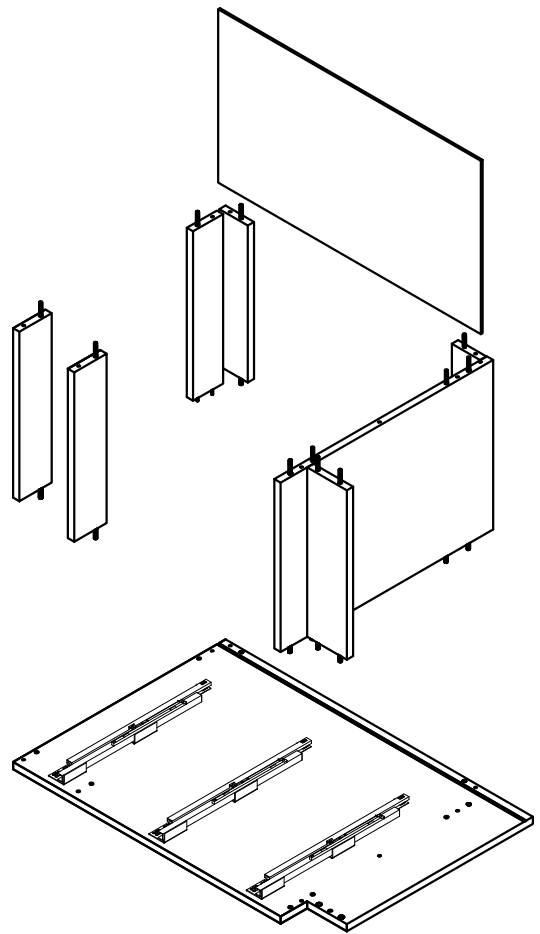


Step-2

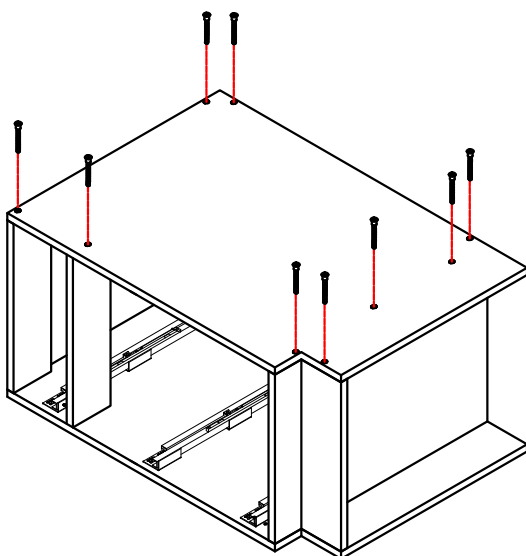

The other side panel is also assembled with the screw

Step-3

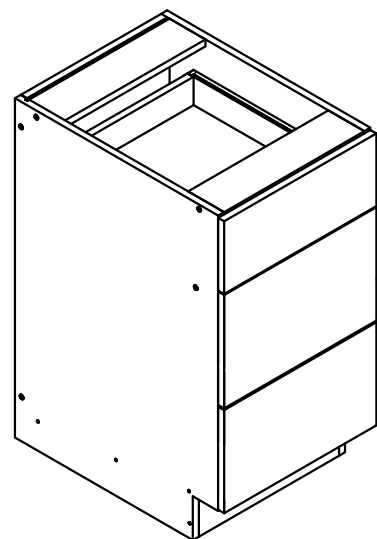

Step-4

